



TECHNICAL
SERVICE BULLETIN

| | | | | | | | | |
|---------------------|--|----------|---------|---------------|-------------------------|--|----------------|--|
| NUMBER | 16TSB-100 | | | TYPE | INFORMATION ONLY | | | |
| ROUTING | INSTALL | X | SERVICE | X | SALES | | PURCH | |
| TITLE | 1616*601B PLOW CONTROLLER MOUNT MODE BEHAVIOR | | | | | | | |
| REV | - | | | ISSUED | 11/21/2022 | | REVISED | |
| AFFECTS | 1616*601B PLOW CONTROLLERS | | | | | | | |
| INFORMATION | <p>A change to the behavior of the SnowDogg plow controllers was made this season to prevent accidental movement.</p> <p>It is now necessary to pause for ~1 second between entering FLOAT mode and entering MOUNT mode. If the operator attempts to enter MOUNT mode immediately after entering FLOAT, the controller will not allow it and the operator will need to leave FLOAT mode before trying again.</p> <p>This is intended to prevent the accidental entry into MOUNT mode while operating the plow in FLOAT mode and causing unexpected behavior.</p> | | | | | | | |
| INSTRUCTIONS | Please include this explanation with mount/dismount training when demonstrating the plow to customers. | | | | | | | |