



TECHNICAL
SERVICE BULLETIN


NUMBER	16TSB-78			TYPE	INFORMATIONAL			
ROUTING	INSTALL	X	SERVICE	X	SALES		PURCH	
TITLE	MOUNTING TIPS							
REV	A			ISSUED	1/12/2018	REVISED	-	
AFFECTS	ALL MOUNTS WITH G2 PLOWS, 1601X002/1601X022							
INFORMATION	See the attached							
CORRECTION								

G2 Mounting Tips

You and your customers may find the following tips helpful. Additional feedback is always welcomed.

INSTALLATION AND ADJUSTMENT

- **Make sure the centerline of the solid pin on your truck mount push bar is ~11". This may require modification of the bumper or air dam but will improve ground clearance and make mounting much easier. If the pushbar is lower than 10" – the prop feet may not work properly.**

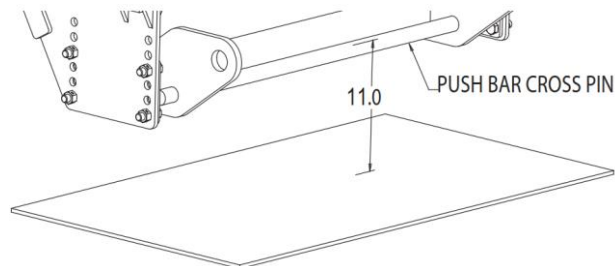

- Your plow feet do NOT need to be tight against the ground when they flip down. This just makes operation more difficult and is not necessary. In many cases you can have a 1+” gap without any difficulty remounting.

DISMOUNTING/MOUNTING

- Make sure the chain is slack (same as previous models)
- Make sure that the prop feet are fully flipped down and hooked over the lift frame. The prop foot holds up the lift frame AND spaces the lift frame from the a-frame. If the prop foot is unable to get past the a-frame – the pushbar is likely mounted too low.

GENERAL TIPS

- On new plows the prop foot operation may be stiff. As they are used they will loosen up to allow easier operation. On brand new installations the prop feet may stay wedged against the lift frame after mounting. You can easily rotate it down with your foot or hand prior to flipping it up.